

## Perimatic new programmer command :

### 1. Auto Line Feed function

Command HEX : 1F 1B 1F 00 00 01 88 00      Turn off Auto Line Feed function

Command HEX : 1F 1B 1F 00 00 01 88 01      Turn on Auto Line Feed function

### 2.For Hanging ,”LOGO” function

Command HEX : 1F 1B 1F 00 00 01 85 01      Turn on function

Command HEX : 1F 1B 1F 00 00 01 85 00      Turn off function